


<b>Booster Pump</b>	
11	U cup bowl
12	booster pump upper sealing ring
13	booster pump sealing rings
14	booster pump down sealing ring
15	screw
16	booster pump U cup holder
17	booster pump o-ring
18	booster pump sealing ring
19	booster pump sealed bowl holder
20	booster pump outlet
21	booster pump support rod
22	booster pump pull rod
23	booster pump tie rod connection sleeve
24	pull rod upper ring
25	Booster pump sucking assembly
26	pull rod down ring
27	pull rod ball
28	booster pump rod seat
29	stainless steel cylinder
30	booster pump o-ring
31	booster pump seat pin
32	booster pump seat ball
33	booster pump seat
34	booster pump o-ring
35	booster pump feed block down seat
36	booster pump support rod fixing bolt

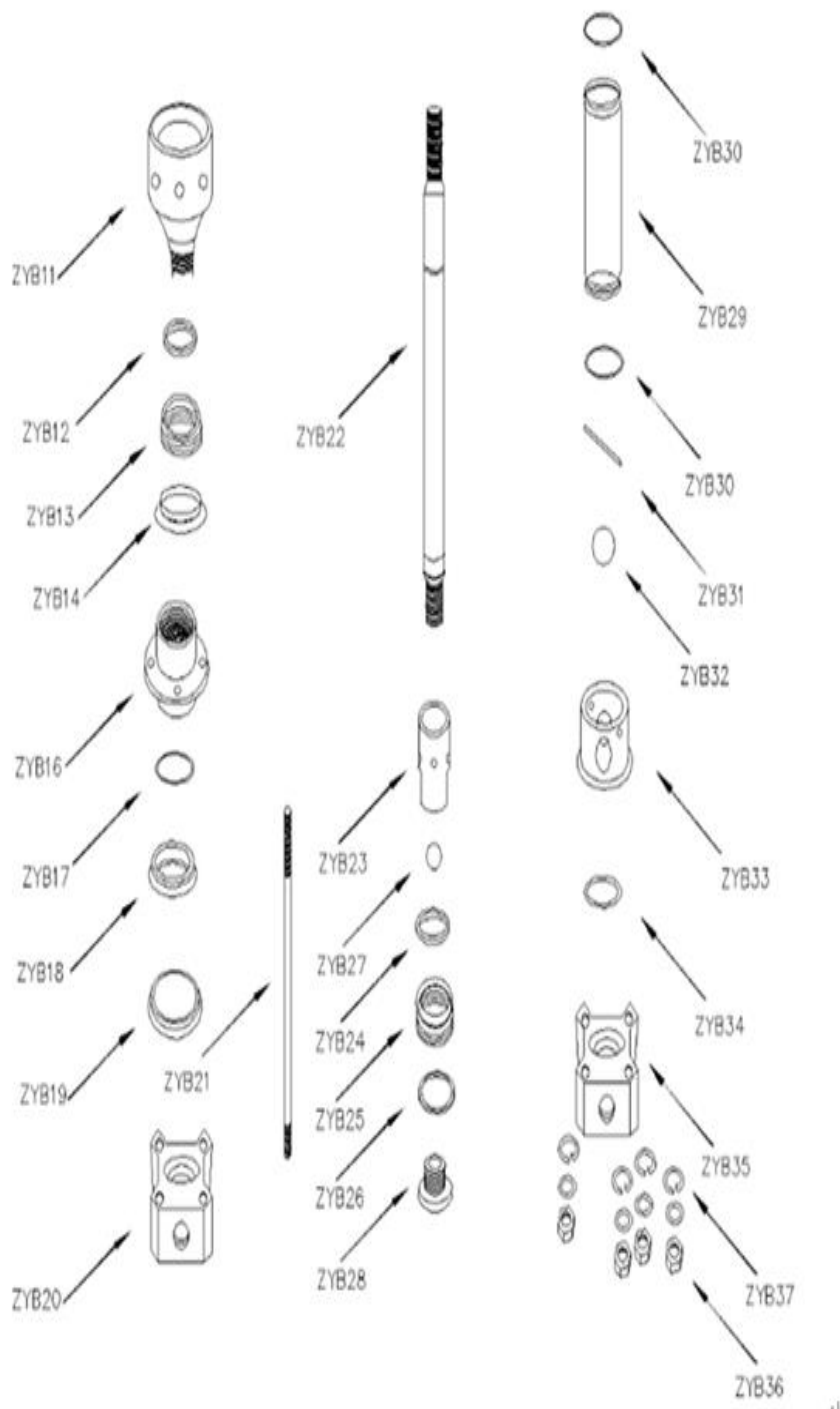

Feeding pump	
1	Air chamber cover
2	Air chamber conical spring
3	Air chamber o-ring
4	Motor cylinder
5	Air chamber reversing cover
6	Air chamber piston
7	Motor o-ring(large)
8	Air chamber piston support tube
9	Reversing o-ring
10	Air chamber piston connecting ring
11	Fixing screw
13	Air chamber piston guide ring
14	Air chamber cylindrical spring
15	Air chamber gasket
16	Air chamber piston pendant
17	Air chamber cylinder
18	Inner o-ring
19	Air chamber piston seat
20	Lock female air connector
21	Motor air exhaust connecting ring
22	Motor air exhaust pipe
23	Guide tape
24	Upper locking sleeve
25	Upper seat o-ring
26	T filter
30	Cylinder O-ring
31	Piston cylinder(large)
32	Ball joint rod
33	Ball rod connection sleeve
34	Connecting rod piston (small)
35	Connecting rod small piston flat gasket
36	Connecting rod piston (small)
37	Connecting rod small piston down gasket
38	Connecting rod piston (large)
39	Connecting rod seat (large)
40	Connecting rod ball
41	Pull rod piston (large)
42	Pull rod large piston flat gasket

