


FIG. 1: 1E44F-5
GASOLINE ENGINE

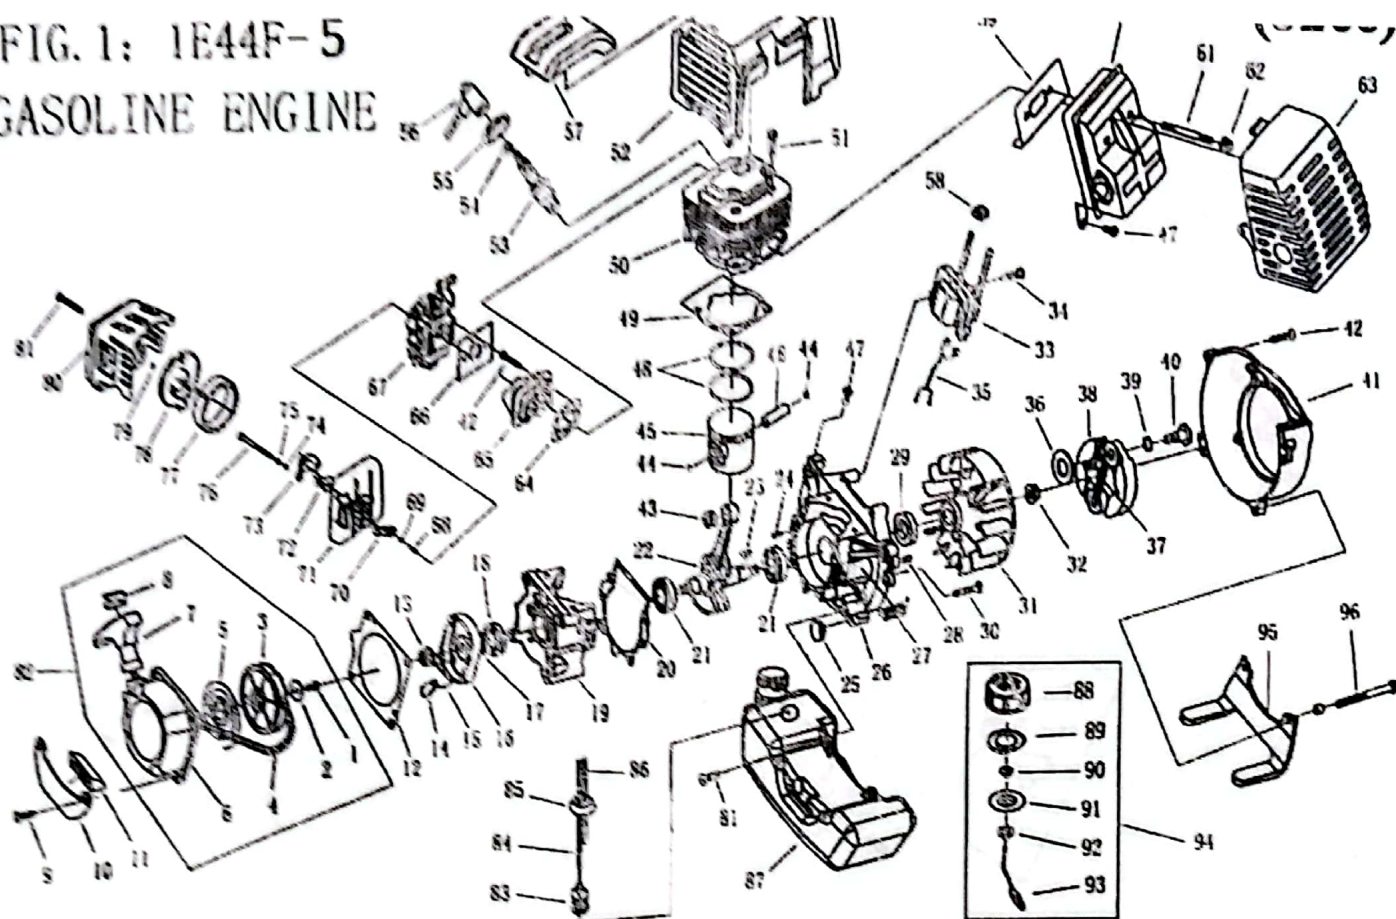

NO.	Part No.	Part Name	Qty.	No.	Part No.	Part Name	Qty.	No.	Part No.	Part Name	Qty.
1	GB/T67	Screw M5×12-9.8-DZ	1	33	1E40F-5.3-	Stator	1	65	1E40F-5A.2	Admitting Pipe	1
2	1E40F-5.11-2	Washer	1	34	GB/T9074.13	Bolt M5×20	2	66	1E40F-5A-1	Gasket	1
3	1E40F-5.11-1	Start Rope Reel	1	35	SG230-2	Cord Comp.	1	67	1E44F-2A.1	Carburetor	1
4		Rope	1	36	1E36F-3	Washer B	2	68	GB/T845	Screw ST2.9×6.5	1
5	1E40FP-3Z.4-7	Recoil Spring	1	37	1E40F-5.6-1	Spring	1	69	GB/T97.1	Washer 3	1
6	1E40F-5.11.1	Start Cover Ass'y	1	38	1E40F-5.6.1	Expander	2	70	1E40F-5A.1.1-1	Choke Handle	1
7	1E40FP-3Z.4-2	Start Handle	1	39	1E40F-5-11	Washer	2	71	1E40F-5A.1.1.1	Inside Cover	1
8	1E40FP-3Z.4-10	Ring	1	40	1E40F-5-12	Screw Pin	2	72	1E40F-5A.1.1-2	Choke	1
9	GB/T9074.4	Screw M5×20	5	41	1E40F-5-9	Fan Cover	1	73	1E40F-5A.1.2	Baffle	1
10	1E40F-5A-4	Stand	1	42	GB/T9074.13	Bolt M5×25	4	74	GB/T97.1	Washer 5	2
11	1E40F-5A-2	Rubber Cover	1	43	1E44F-2A.2-3	Bearing	1	75	GB/T93	Washer 5	2
12	1E40F-5-10	Gasket	1	44	1E40F-03.02.01	Ring	2	76	GB/T70.1	Screw M5×55	2
13	GB/T6170	Nut M6	1	45	1E44F-2A.2-1	Piston	1	77	1E34F.1-1	Filter Net	1
14	1E40FP.4-2	Start Claw	1	46	1E44F-2A.2-2	Piston Pin	1	78	1E40F-5A.1-2	Inside Cover	1
15	1E36F.1.2-2	Start Spring	1	47	GB/T9074.4	Bolt M5×12	3	79	GB/T3452.1	O-Washer 3.15×1.8	1
16	1E40F-5.7-1	Start Reel	1	48	1E44F-2A.2-4	Piston Ring	2	80	1E40F-5A.1-1	Outside Cover	1
17	GB/T896	Stop Ring 4	1	49	1E40F-5-6	Gasket	1	81	GB/T9074.4	Screw M5×16	3
18	1E36F.2	Oil-seal	1	50	1E44F-2A-1	Cylinder	1	82	1E40F-5.11	Starter	1
19	1E40F-5.8-2	Crank Case	1	51	GB/T70.1	Screw M5×20	4	83	1E34F.9.2-3	Cleaner Cover	1
20	1E40F-5.8-4	Gasket	1	52	1E40F-5.5	Guide Cover Ass'y	1	84	1E40F-5A.4.2-2	Fuel Pipe	1
21	GB/T276	Bearing 6202/P5	2	53	L6 (LD)	Spark Plug	1	85	1E36FF.8.1-1	Plug	1
22	1E44F-2A.2.1	Crank Shaft	1	54		Spring	1	86	1E40F-5A.4.2-1	Fuel Pipe	1
23	GB/T1099	Key 3×13	1	55		Plug Cap	1	87	1E40F-5A.4.1	Fuel Tank	1
24	GB/T119	Pin B5×12	2	56		Cap	1	88	1E32FL.6.2-1	Fuel Tank Lid	1
25	1E40F-5A.4.2-1	Rubber Washer	2	57	1E40F-5-8	Cover	1	89	CG420.1.3.1-2	Gasket	1
26	1E40F-5.8-1	Crank Case	1	58	1E40F-5.3-1	Plug	1	90	EB415.4.1.1-1	Inlet	1
27	1E40F-5.8-3	Guide Cover	1	59	1E40F-5-5	Gasket	1	91	1E32FL.6.2-2	Inside Cover	1
28	GB/T119	Pin B4×10	2	60	1E40F-5.2	Muffler	1	92	1E32FL.6.2-3	Lid	1
29	1E40F-5.9	Oil-seal	1	61	1E40F-5-13	Bolt	2	93	1E32FL.6.2-4	Chain	1
30	GB/T9074.4	Screw M5×30	4	62	GB/T6177.1	Nut M6	2	94	1E32FL.6.2	Fuel Tank Lid COMP.	1
31	1E40F-5.3-	Fly Wheel	1	63	1E40F-5-7	Muffler Cover	1	95	1E40F-5A.1	Stand	1