



## SC400 / SC600 Spare Parts List

REF.NO	PART NO	DESCRIPTION	unit using Q'TY	Order quantity
2	30121-00091-00	Nut M8		
3	30136-00279-00	Washer 8		
4	70002-02872-00	Engine pedestal		
5	30101-00723-00	Bolt M8x40		
6	33141-00105-00	transmission case uper cover		
7	33049-00094-00	Active wheel		
8	33400-00044-00	Key		
9	30136-00241-00	big washer		
10	30136-00244-00	Washer 12		
11	30106-00027-00	Bolt		
12	33712-00005-00	V Belt		
13	33049-00092-00	Passive wheel		
14	20061-00001-00	tensional wheel assy		
15	34032-00110-00	Worm shaft bearing bush		
16	33401-00036-00	bear housing gasket		
17	34033-00050-00	worm shaft		
18	33050-00054-00	tensional wheel spring		
19	30125-00003-00	Hex locking Nut M8		
20	30136-00279-00	tensional wheel bush		
21	30101-00722-00	Hex bolt M8*30		
22	34007-00094-00	Oil seal 20*35*10		
23	20060-00001-01	gear box assy		
24	33709-00061-00	Ristance blade		
25	33709-00054-00	side disk		
26	20062-00029-00	Left blades assy		
27	30125-00053-0C	Hex locking Nut M10		
28	33004-00727-00	bracket assy, front wheel		
29	30101-00868-00	Hex bolt M10X65		
30	20134-00222-00	Wheel assembly		
31	30100-00148-00	Bolt, front wheel shaft		
32	30125-00053-0C	Hex locking Nut M10		
33	20062-00030-00	Right blades assy		
34	33704-00001-00	gear box front baffle		
35	30101-00403-00	Hex bolt M6*16		
36	30101-00720-00	hex bolt M8*20		
37	30125-00003-00	hex locking nut M8		
38	30136-00279-00	Washer 8		
39	30106-00013-00	bolt M8*25		
40	34006-00109-00	R pin Φ1		
41	34006-00137-00	B pin Φ6		
42	34006-00109-00	R pin Φ2		

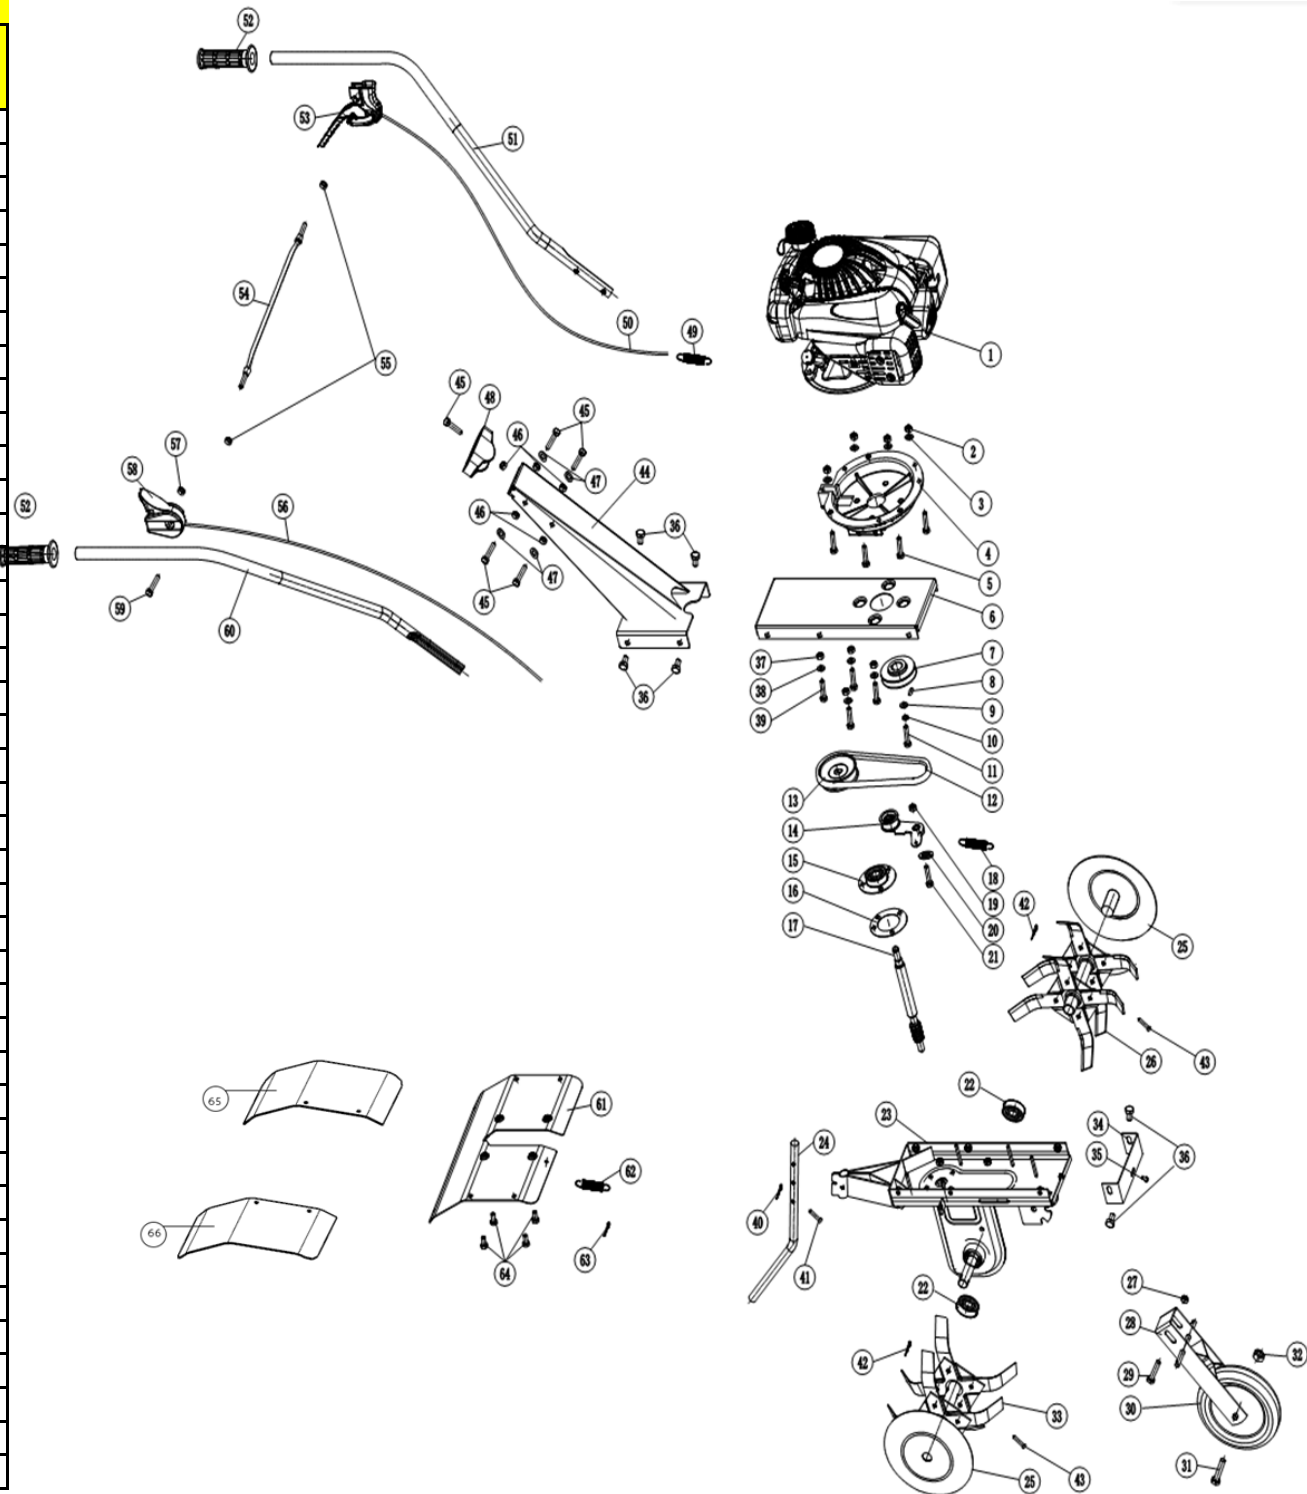

43	34006-00105-00	B pin Φ8		
44	33706-00005-00	handle seat		
45	30106-00014-00	Hex bolt M8*35		
46	30125-00003-00	hex locking nut M8		
47	30136-00283-00	Washer 8		
48	33340-00114-00	Handrail pedestal		
49	33050-00054-00	tensinoal wheel spring		
50	33707-00024-00	clutch cable		
51	33706-00151-00	Left handrail assy		
52	33015-00164-00	handrail Ruber		
53	33705-00023-00	clutch handle		
54	33706-00150-00	strength pipe between handrail		
55	30128-00031-00	Hex Locking nut M8		
56	33707-00037-00	Fuel switch cable		
57	30134-00008-00	Nut M6		
58	33707-00037-00	Accelerator cable assembly		
59	30101-00895-00	Hex bolt M6*45		
60	33706-00006-00	Right handrail assy		
61	33704-00016-00	Dam-board		
62	33050-00045-00	Fender tensional Spring		
63	34006-00109-00	R pin Φ2		
64	30101-00719-00	Hex bolt M8*16		
65	33704-00038-00			
66	33704-00037-00			

Engine exploded view

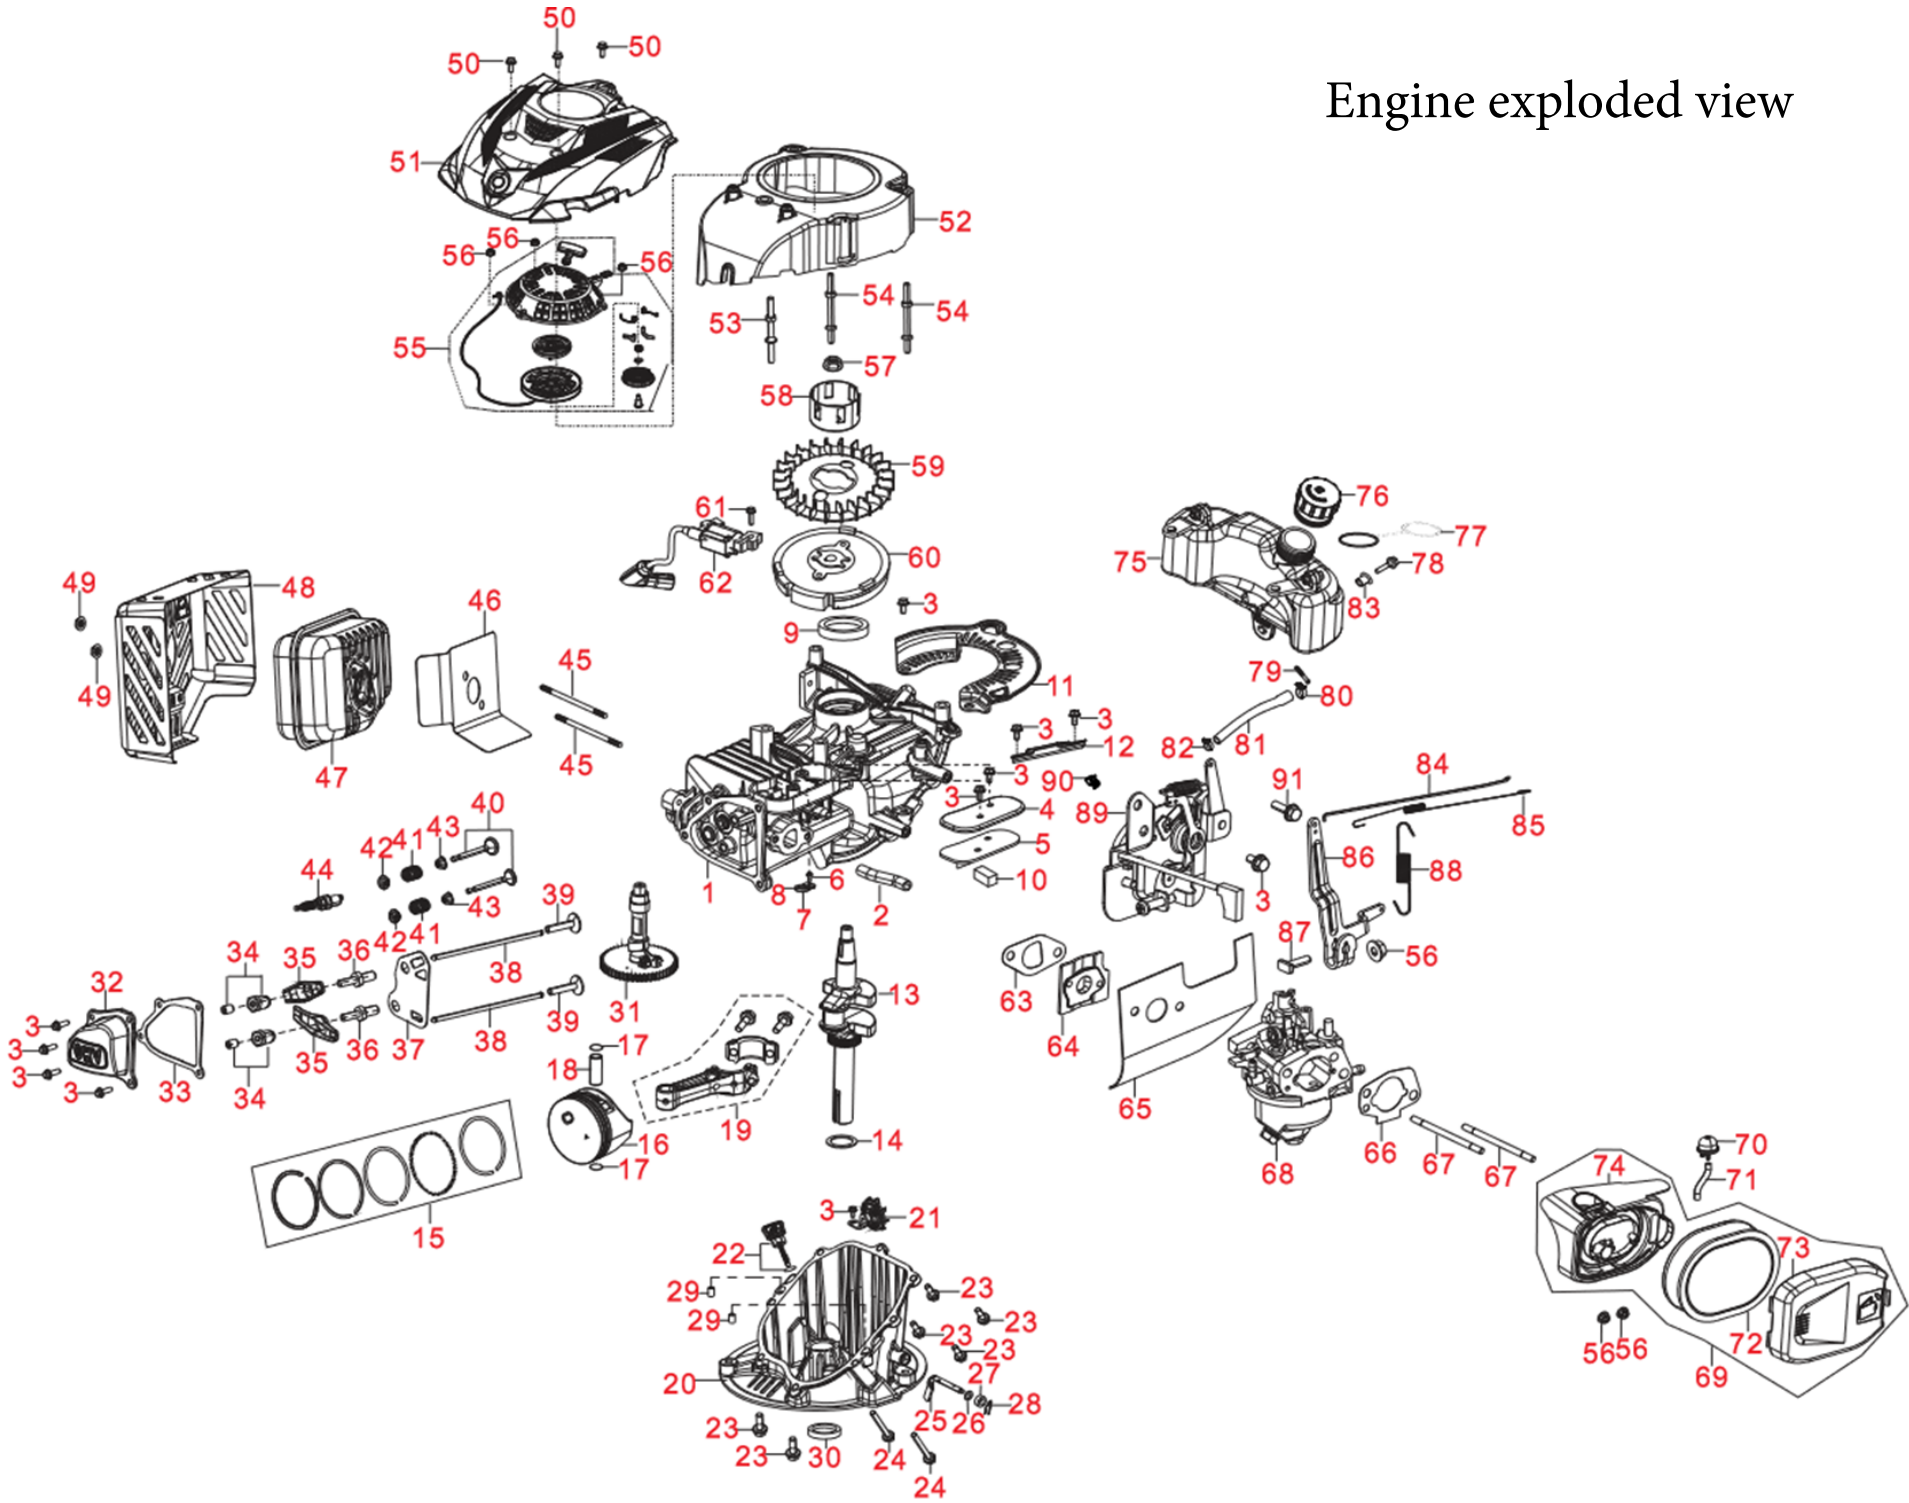

Engine exploded view				
REF.NO.	PART NO	DESCRIPTION	unit using Q'TY	Order quantity
1	11310-Z180230-LSA0	CRANKCASE SUBASSEMBLY.	1	
2	17004-Z180110-00A0	TUBE, BREATHER	1	
3	90007-0612-A1A0	BOLT	11	
4	11333-Z180110-00A0	PLATE, BREATH GROOVE COVER	1	
5	11332-Z180110-00A0	GASKET, BREATH GROOVE	1	
6	90103-0410-51	CROSS-STITCH BOLT	1	
7	11321-Z180110-00A0	PIECE, BREATH	1	
8	12045-Z240110-0000	REED VALVE STOPPING PLATE	1	
9	34007-00127-00	SEAL, OIL	1	
10	11331-Z180110-00A0	STRAINER, BREATH GROOVE	1	
11	19340-Z180110-00A0	SHIELD,LOWER	1	
12	19340-Z180210-0000	SHIELD,LOWER	1	
13	13300-Z181610-0000	CRANKSHAFT ASSY.	1	
14	90408-Z030210-0000	WASHER, FLAT	1	
15	20084-00140-00	RING ASSY, PISTON	1	
16	34004-00110-00	PISTON	1	
17	13122-Z350110-00A0	CLIP, PISTON PIN	2	
18	13121-Z250110-0000	PIN, PISTON	1	
19	34005-00009-00	ROD, CONNECTING	1	
20	11411-Z180130-YJA0	COVER, CRANKCASE	1	
21	16400-Z180110-00A0	GEAR ASSY, GOVERNOR	1	
22	20026-00066-00	DIPSTICK SUBASSEMBLY, OIL	1	
23	90007-0618-A1	BOLT	6	
24	90007-0650-A1	BOLT	2	
25	16061-Z180110-00A0	ARM, GOVERNOR	1	
26	90408-Z010210-0000	WASHER, FLAT	1	
27	34007-00128-00	SEAL, OIL	1	
28	90501-Z010110-0000	PIN	1	
29	90502-0818-00	PIN	2	
30	34007-00126-00	SEAL, OIL	1	
31	14200-Z180110-00A0	CAMSHAFT ASSY.	1	
32	12411-Z180110-00A0	COVER, CYLINDER HEAD	1	

33	33048-00505-00	GASKET, CYLINDER HEAD COVER	1	
34	97002-Z240110-0000	NUT, VALVE ADJUSTING AND SCREW, THROTTLE VALVE	2	
35	14311-Z180210-0000	ROCKER, VALVE	2	
36	14313-Z240110-0000	BOLT, ROCKER SHAFT	2	
37	14091-Z180110-00A0	PLATE, LITER LIMITED	1	
38	14071-Z180110-00A0	LIFTER, VALVE	2	
39	14081-Z240110-0000	TAPPET, VALVE	2	
40	70010-01518-00	VALVE	1	
41	12103-Z350110-00A0	SPRING, VALVE	2	
42	12112-Z010110-0000	SEAT, VALVE SPRING	2	
43	12101-Z010110-0000	GUIDE, SEAL	2	
44	30010-Z180110-00A0	PLUG, SPARK	1	
45	90207-Z180210-0000	BOLT	2	
46	18001-Z180410-00A0	GASKET, EXHAUST OUTLET	1	
47	18100HZ350110-00A0	MUFFLER ASSY.	1	
48	18130-Z180210-QBA0	COVER, MUFFLER OUTER	1	
49	90310-0600-31	NUT	2	
50	90001-0516-01	BOLT	3	
51	80001-Z180410-Q200	HOUSING, ENGINE	1	
52	28110-Z180110-00A0	SHROUD	1	
53	28001-Z180210-00A0	STUD	1	
54	28001-Z180110-00A0	STUD	2	
55	20149-00187-00	STARTER ASSY, RECOIL	1	
56	30101-00754-00	NUT	6	
57	30125-00011-00	NUT, FLYWHEEL	1	
58	28002-Z180110-0000	PULLEY, STARTER	1	
59	33099-00231-00	IMPELLER	1	
60	13510-Z180210-0000	FLYWHEEL SUBASSEMBLY	1	
61	90007-0630-A1	BOLT	1	
62	20028-00133-00	COIL, IGNITION	1	
63	33048-00507-00	GASKET, INSULATOR PLATE	1	
64	33014-01092-00	PLATE, CARBURETOR INSULATOR	1	
65	33048-00508-00	GASKET, INSULATOR PLATE	1	
66	33048-00509-00	GASKET, CARBURETOR	1	
67	90207-Z180110-00A0	BOLT	2	

68	70010-01519-00	CARBURETOR ASSY.	1	
69	20025-00215-00	CLEANER, AIR	1	
70	70009-01561-00	VALVE, STARTING RICHED	1	
71	70009-01562-00	TUBE, STARTING RICHED VALVE	1	
72	17150-Z180220-0000	ELEMENT SUBASSEMBLY, AIR CLEANER	1	
73	17104-Z180110-0000	COVER, AIR CLEANER CASE	1	
74	17101HZ180110-0000	CASE, AIR CLEANER	1	
75	16600-Z180410-Q2A9	TANK, FUEL	1	
76	20131-00055-00	COVER, FUEL TANK	1	
77	16744-Z620120-0000	CHAIN PROOF OFF, FUEL TANK COVER	1	
78	90007-0640-A1	BOLT	1	
79	16652-Z030110-0000	STRAINER, FUEL	1	
80	90685-1000-01	CLAMP	1	
81	90686-Z180410-0000	TUBE, FUEL	1	
82	90685-0700-01	CLAMP	1	
83	90683-Z250410-0000	BUSH	1	
84	16062-Z180110-00A0	ROD, GOVERNEOR	1	
85	34015-00110-00	SPRING, THROTTLE VALVE RETURNING	1	
86	16070-Z180110-00A0	SUPPORT SUBASSEMBLY, GOVERNOR	1	
87	16072-Z010110-0000	BOLT, GOVERNOR SUPPORT	1	
88	70009-01560-00	SPRING, GOVERNOR	1	
89	16520-Z180410-0000	CONTROL ASSY, THROTTLE	1	
90	90684-Z250110-0000	CLIP	1	
91	90007-0625-A1A0	BOLT	1	

