



E.Engine


E-01 .气缸头组件 Cylinder head

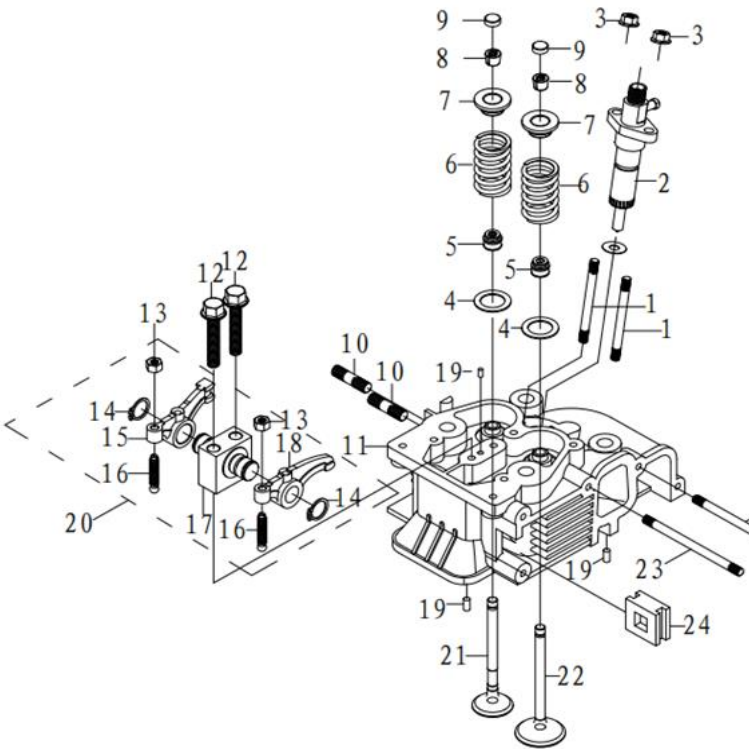

部件图 NO.	序号 NO.	零部件编码 Part No.	零部件名称 Description	
			中文	English
E-01	1	30110-00175-00	双头螺柱	Bolt, Stud
E-01	2	70010-01695-00	喷油器部件	Fuel Iniection Assy
E-01	3	30128-00048-00	六角法兰面螺母	Flange Nut
E-01	10	30110-00161-00	双头螺柱	Bolt, Stud
E-01	11	20023-00218-00	气缸盖部件	Cylinder Head Assy
E-01	12	30101-00832-00	六角法兰面螺栓	Flange Bolt
E-01	19	34006-00173-00	圆柱销	Lock Pin
E-01	20	34019-00068-00	摇臂支座部件	Rock Arm Assy
E-01	23	30110-00181-00	双头螺柱	Bolt, Stud
总值				

E-02 箱体组件 Crankcase assy

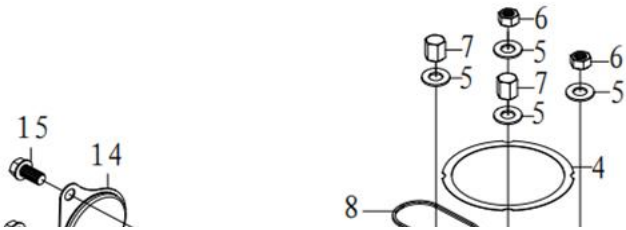


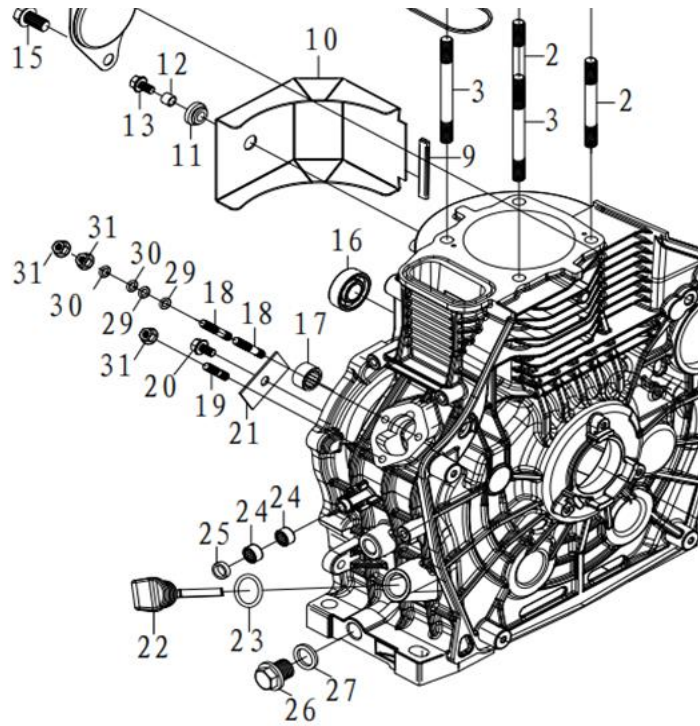

部件图 NO.	序号 NO.	零部件编码 Part No.	零部件名称 Description	
			中文	English
E-02	1	34011-00443-00	曲轴箱体	Crankcase
E-02	2	30110-00132-00	气缸盖双头螺栓	Cylinder Head Stud
E-02	3	30110-00133-00	气缸盖双头螺栓	Cylinder Head Stud
E-02	4	33048-00629-00	汽缸盖热片	Cylinder Head gasket, Copper
E-02	5	30136-00375-00	气缸盖螺母垫片	Washer
E-02	6	30121-00133-00	气缸盖螺母/薄	Nut, Cylinder Head
E-02	7	30134-00037-00	气缸盖螺母(厚)	Nut, Cylinder Head (Thick)
E-02	8	33048-00879-00	矩形密封圈	Rectangle Seal Ring
E-02	9	33275-00137-00	引风板减震条	Cooling Guide Plate gasket, Plastic
E-02	10	34021-00332-00	引风板	Wind Guide Plate
E-02	11	70009-02022-00	引风板减震套	Vibration Isolator, Cooling Guide Plate
E-02	12	34032-00177-00	引风板减震套衬套	Lining
E-02	13	30151-00161-00	六角法兰面螺栓	Flange Bolt
E-02	14	33014-01601-00	启动电机孔盖板	Starter Mounting Cover
E-02	15	30151-00147-00	六角法兰螺栓	Flange Bolt
E-02	16	30141-00275-00	深沟球轴承	Ball Bearing
E-02	17	30141-00294-00	滚针轴承	Needle Bearing
E-02	18	70010-01701-00	双头螺柱	Bolt, Stud
E-02	19	70010-01700-00	双头螺柱	Bolt, Stud
E-02	20	30101-00803-00	六角法兰面螺栓	Bolt
E-02	21	20217-00216-00	曲轴止推片	Retainer
E-02	22	20026-00072-00	机油尺	Oil Dipstick
E-02	23	30152-00403-00	O型密封圈	O-Ring
E-02	24	30141-00293-00	滚针轴承	Needle Bearing

E-02	25	34007-00130-00	油封	Oil Seal
E-02	26	33126-00133-00	机体放油螺塞	Drain Plug
E-02	27	30136-00374-00	放油螺栓垫片	Oil Plug Seal
	28	34007-00139-00	油封	Oil Seal
	31	30128-00048-00	六角法兰面螺母	Flange Nut
总值				


E-03 曲轴箱盖Crankcase cover

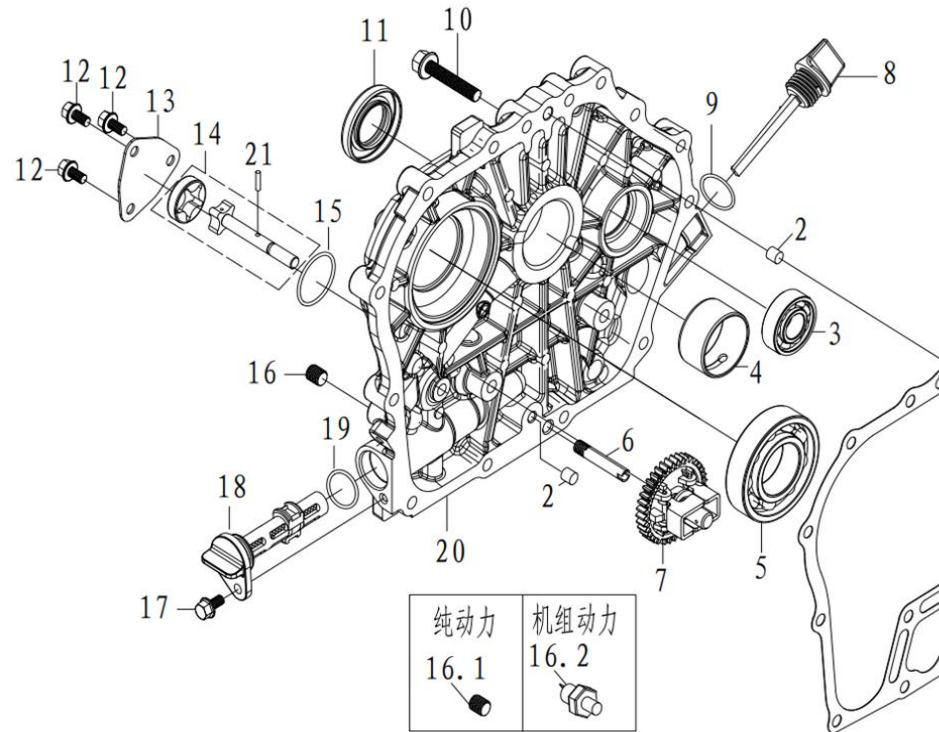

部件图 NO.	序号 NO.	零部件编码 Part No.	零部件名称 Description	
			中文	English
E-03	1	33048-00696-00	曲轴箱盖垫片	Gasket, Crankcase Cover
E-03	2	34006-00175-00	圆柱销	Pin
E-03	3	30141-00275-00	深沟球轴承	Bearing
E-03	4	30141-00257-00	主轴瓦	Crankshaft Bushing
E-03	6	70010-01710-00	进油导管	oil Duct
E-03	7	70010-01674-00	调速从动齿轮组合	Governor Gear Comp
E-03	8	20026-00072-00	机油尺	Oil Dipstick
E-03	9	30152-00403-00	O型密封圈	O-Ring
E-03	10	30101-00812-00	六角法一面螺栓	Flange Bolt
E-03	11	34007-00140-00	油封	Oil Seal
E-03	12	30101-00791-00	六角法兰面螺栓	Flange Bolt
E-03	13	33014-01617-00	机油泵盖板	Oil Pump Cover
E-03	14	70010-01663-00	机油泵部件	Oil Pump Assy
E-03	15	33048-00880-00	O型密封圈	Sealing Ring
E-03	16	33247-00043-00	机油压力传感器	Oil Pressure Sensor
E-03	17	30101-00792-00	六角法兰面螺栓	Flange Bolt
E-03	18	70010-01676-00	机油滤清器部件	Engine Oil Filter Element


E-03	19	30152-00403-00	0型密封圈	Seal Ring
E-03	20	33129-00292-00	曲轴箱盖	Cover,Crakcase
E-03	21	34006-00276-00	圆柱销	Pin
总值				


E-04曲轴活塞连杆总成 Crankshaft piston

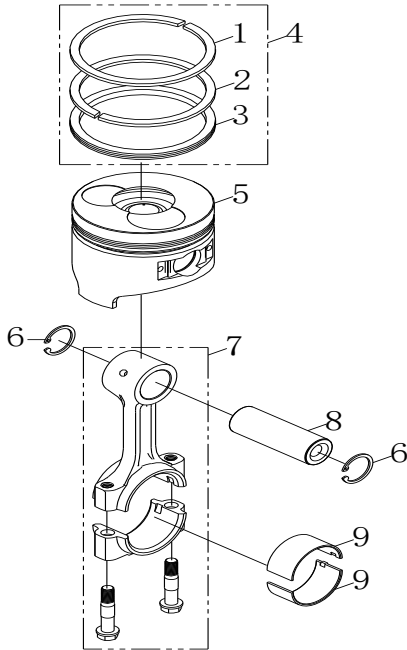

部件图 NO.	序号 NO.	零部件编码 Part No.	零部件名称 Desription	
			中文	English
E-04	4	20084-00150-00	活塞环组件/1. 2/1. 2/2. 5	RING SET, PISTON
E-04	5	34004-00122-00	活塞	PISTON
E-04	6	30150-00136-00	活塞销挡圈	Clip, Piston Pin
E-04	7	20008-00084-00	连杆总成	CONNECTING ROD ASSY
E-04	8	34006-00152-00	活塞销	PIN, PISTON
E-04	9	30141-00302-00	连杆轴瓦	Bushing, Connect Rod
总值				


E-05凸轮轴 (配气结构) Camshaft

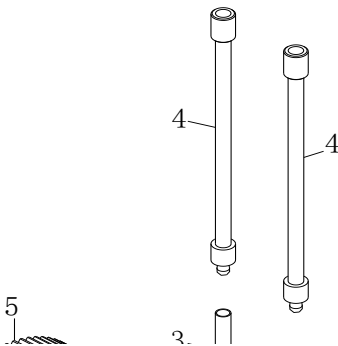

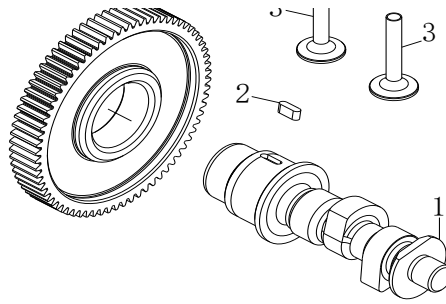


部件图 NO.	序号 NO.	零部件编码 Part No.	零部件名称 Description	
			中文	English
E-05	1	20012-00067-00	凸轮轴	Camshaft
E-05	2	33400-00067-00	普通型平键	Flat Key 5*5*14
E-05	3	34008-00025-00	气门挺柱	Valve Tappet
E-05	4	34020-00048-00	推杆	Push Rod
E-05	5	34033-00201-00	凸轮轴正时齿轮	Camshaft Timing Gear
总值				

E-06 喷油泵总成

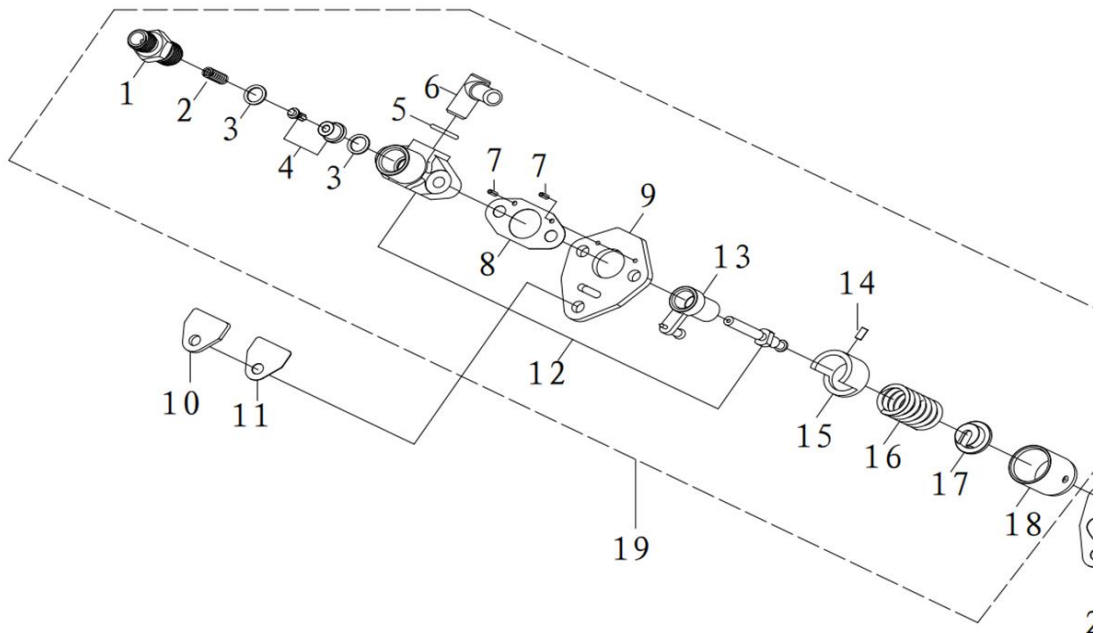


部件图 NO.	序号 NO.	零部件编码 Part No.	零部件名称 Description	
			中文	English
E-06	10	33014-01604-00	喷油泵视窗盖板	Fuel Pump Cover
E-06	11	33048-00652-00	喷油泵视窗盖垫片	Fuel Pump Gasket
E-06	19	20100-00554-00	喷油泵部件	Fuel Pump Assy
E-06	20	33048-00597-00	喷油泵调整垫片	Fuel Pump Gasket
总值				

E-07 反冲起动器总成 Recoil starter

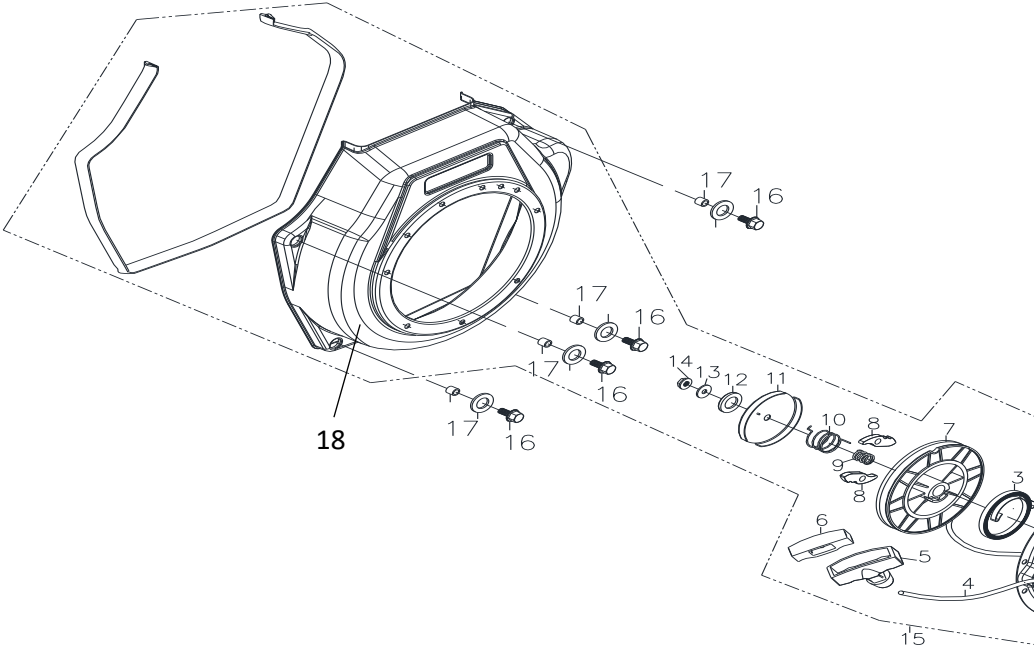

部件图 NO.	序号 NO.	零部件编码 Part No.	零部件名称 Desription	
			中文	English
E-07	1	30101-00791-00	六角法兰面螺栓/M6×12	BOLT, M6×8
E-07	15	20010-00420-xx	反冲启动器总成	WIND GUIDER, RECOIL
E-07	16	30151-00159-00	六角法兰面螺栓+平垫	Bolt M6*25
E-07	17	34032-00179-00	导风罩衬套	Collar
E-07	18	20010-00420-xx	导风罩组件	Wind Scooper Assy
总值				


E-08调速控制系统Control

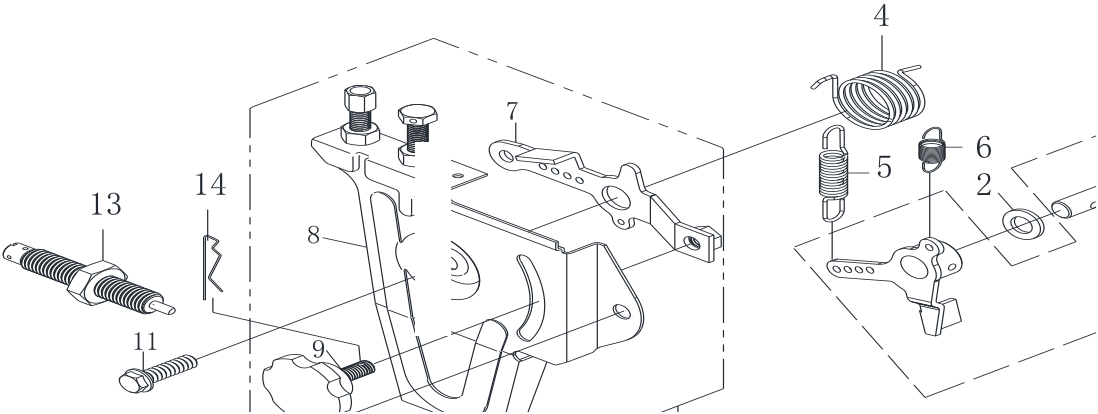



部件图 NO.	序号 NO.	零部件编码 Part No.	零部件名称 Description	
			中文	English
E-08	1	20016-00006-00	拨叉组件	Lever Fork
E-08	2	30136-00367-00	拨叉轴调整垫圈	Adjusting Washer
E-08	4	33050-00078-00	油门组合回位弹簧	Reset Spring
E-08	5	34015-00133-00	调速弹簧	Governor Spring
E-08	6	33050-00079-00	微调弹簧	Fine Tuning Spring
E-08	10	20022-00107-00	油门操纵组合	Control Panel
E-08	11	30101-00794-00	六角法兰面螺栓	Flange Bolt M6*18
E-08	12	30101-00792-00	六角法兰面螺栓	Flange Bolt M6*14
E-08	13	31003-00140-00	油量控制器部件	Control Lever Assy
总值				


E-09 飞轮 Flywheel

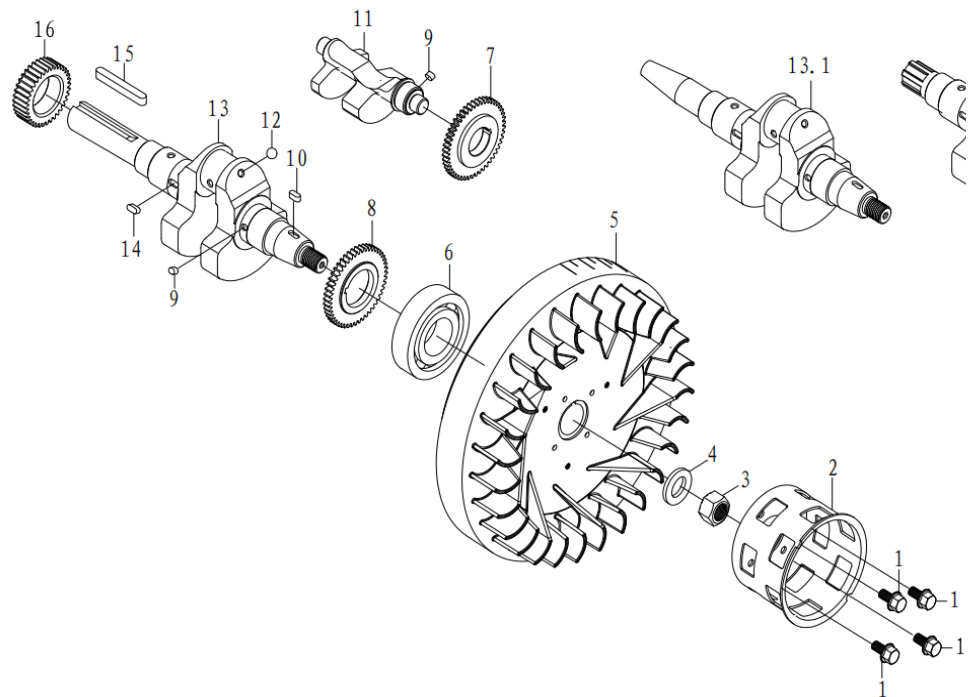

部件图 NO.	序号 NO.	零部件编码 Part No.	零部件名称 Description	
			中文	English
E-09	1	30101-00791-00	六角法兰面螺栓	Flange Bolt
E-09	2	70010-02839-00	启动杯	Starter Pulley
E-09	3	30125-00068-00	六角法兰面螺母	Flanee Nut
E-09	4	30136-00338-00	飞轮螺母垫片	Washer
E-09	5	33099-00265-00	飞轮	Fly wheel
E-09	6	30141-00280-00	深沟球轴承	Ball Bearing


E-09	7	34033-00192-00	平衡轴正时齿轮	Timing Gear Of Balance Shaft
E-09	8	34033-00149-00	平衡轴传动齿轮	Drive Gear Of Balance Shsft
E-09	9	33400-00064-00	普通型 平键	key
E-09	10	33400-00067-00	普通型 平键	key
E-09	11	34033-00188-00	平衡轴	Balancer Shaft
E-09	12	70003-02189-00	钢球	Steel Ball
E-09	13	20011-00331-00	曲轴	Crank Shaft Assy
E-09	14	33400-00066-00	普通型 平键GB/T1096/515:12	key
E-09	16	34033-00148-00	曲轴正时齿轮	Crankshaft Timing Gear
总值				

E-10 空气滤清器 Air cleaner

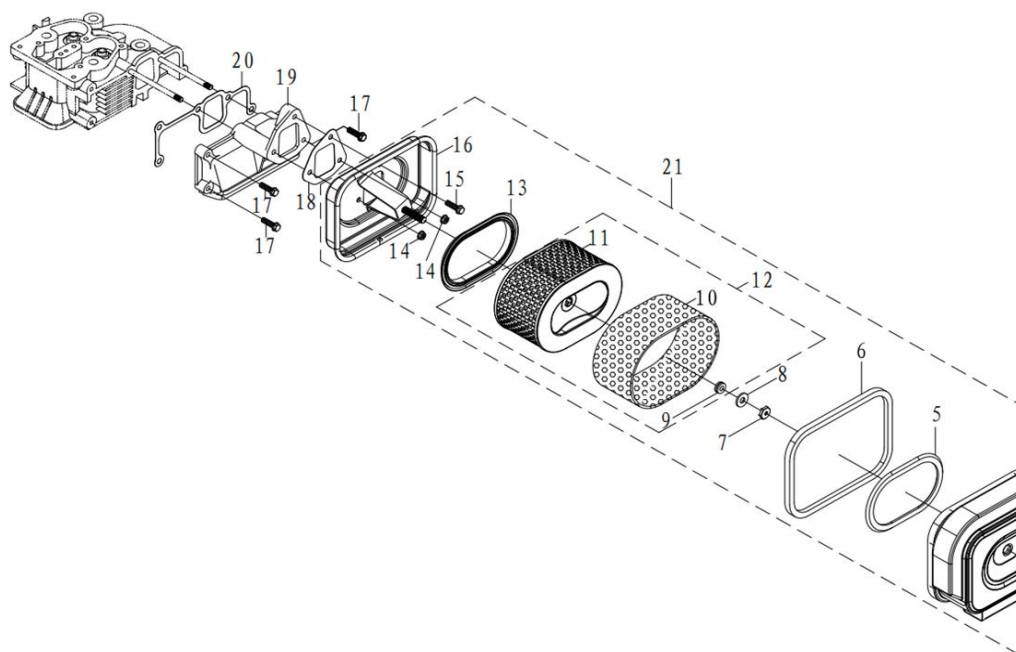


部件图 NO.	序号 NO.	零部件编码 Part No.	零部件名称 Description	
			中文	English
E-10	12	70010-01782-00	滤芯	Air Cleaner Element Assy
E-10	14	30125-00070-00	六角法兰面螺母	Flange Nut
E-10	15	30151-00098-00	六角法兰面螺栓	Flange Bolt
E-10	18	33048-00690-00	空滤器垫	Casket, Air Cleaner
E-10	19	34028-00047-00	进气管	Intake Pipe
E-10	20	33048-00688-00	进气管垫	Gasket, Intake Pipe
E-10	21	20025-00236-00	空气滤清器部件	Air cleaner Assv
总值				

E-11 排气系统

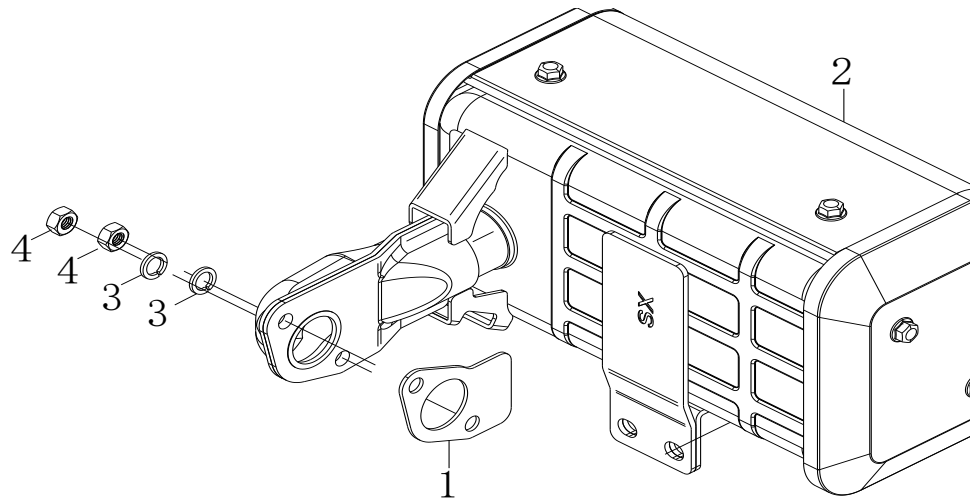

部件图 NO.	序号 NO.	零部件编码 Part No.	零部件名称 Description	
			中文	English
E-11	1	33048-00702-00	排气口密封垫	Muffler Gasket
E-11	2	20202-01174-00	消声器总成	Muffler Comp
E-11	3	30139-00074-00	标准型弹簧垫圈	Spring Washer 8
E-11	4	30121-00119-00	1型六角螺母	Nut M8
E-11	5	30101-00857-00	六角法兰面螺栓	Flange Bolt M8*16
总值				


E-13 气缸盖罩组件 BONNET ASSY

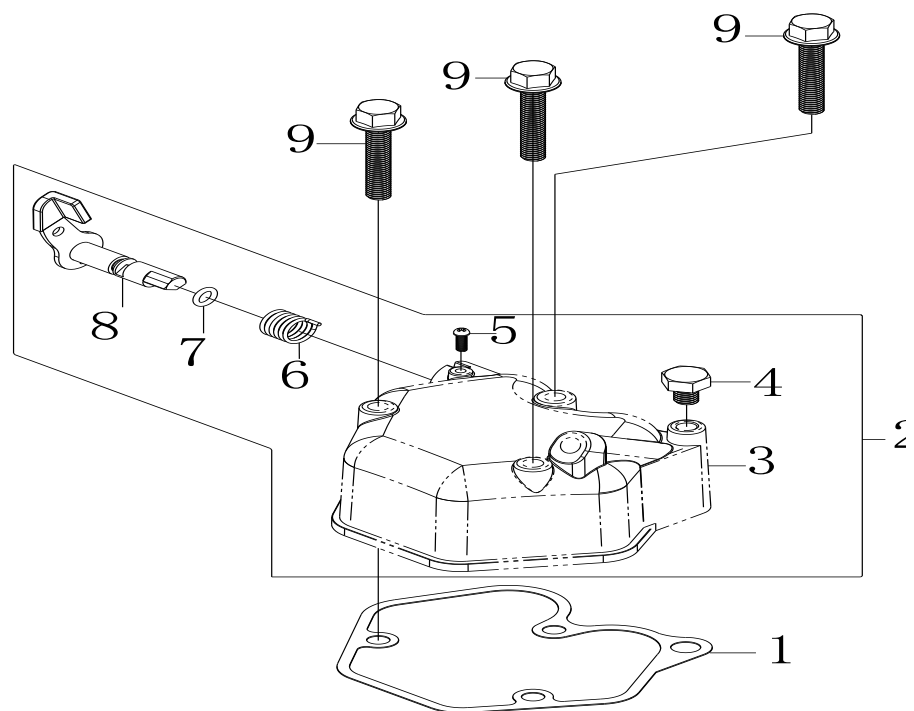

部件图	序号	零部件编码	零部件名称 Description
-----	----	-------	-------------------

部件图 NO.	序号 NO.	零部件编码 Part No.	中文	English
E-13	1	33048-00698-00	气缸头盖密封垫	Valve Cover Gasket
E-13	2	20021-00100-00	气缸头盖组件	Valve Cover
E-13	9	30101-00799-00	六角法兰面螺栓	Flange Bolt M6*70
总值				

E-14 启动电机Starting Motor

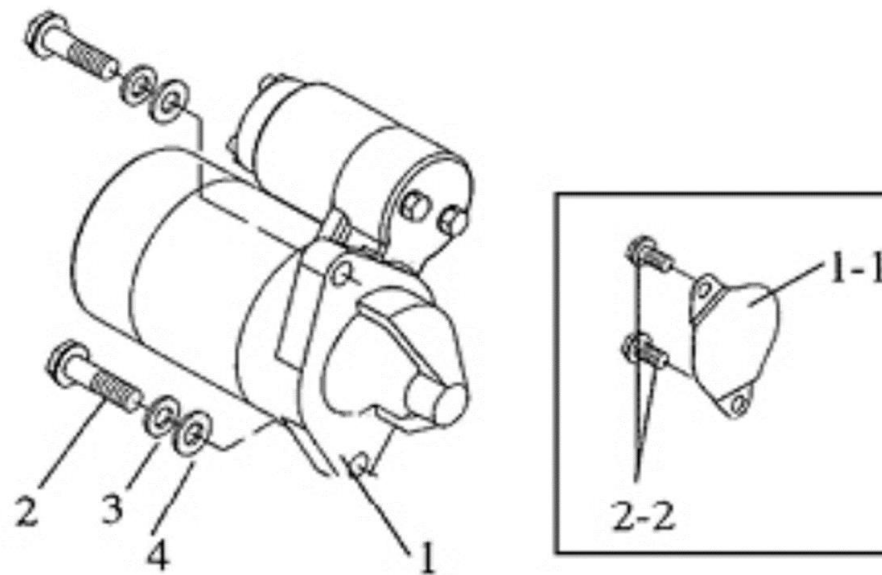

部件图 NO.	序号 NO.	零部件编码 Part No.	零部件名称 Desription	
			中文	English
E-13	1	20149-00023-00	启动电机部件	Starting motor assy
E-13	2	30100-00189-00	螺栓	Bolt
总值				

Engine : CP186F			
quantity	purchase quantity	Unit price	amount
2			0
1			0
2			0
2			0
1			0
2			0
3			0
1			0
2			0
			0




Engine : CP186F			
quantity	purchase quantity	Unit price	amount
1			0
2			0
2			0
若干			0
4			0
2			0
2			0
1			0
1			0
1			0
1			0
1			0
1			0
1			0
1			0
2			0
1			0
1			0
2			0
1			0
1			0
1			0
1			0
1			0
1			0
2			0


1			0
1			0
1			0
			0

	Engine : CP186F		
quantity	purchase quantiity	Unit price	amount
1			0
2			0
1			0
1			0
1			0
2			0
			0


Engine : CP186F			
quantity	purchase quantity	Unit price	amount
2			0
2			0
2			0
2			0
2			0
			0

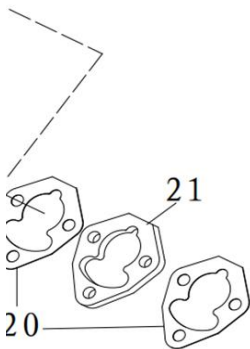


Engine : CP186F			
quantity	purchase quantity	Unit price	amount
1			0
1			0
1			0
1			0
			0

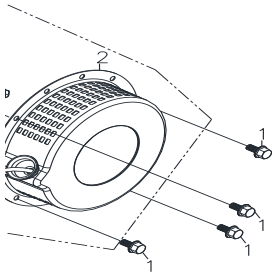


Engine : CP186F			
quantity	purchase quantity	Unit price	amount
4			0
1			0
4			0
4			0
1			
			0

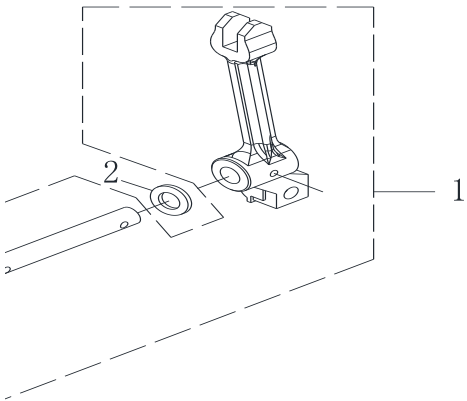

1			0
1			0
2			0
1			0
1			0
1			0
1			0
1			0
1			0
1			0
			0

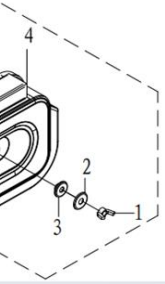

	Engine : CP186F		
quantity	purchase quantity	Unit price	amount
1			0
2			0
1			0
1			0
1			0
1			0
1			0
			0

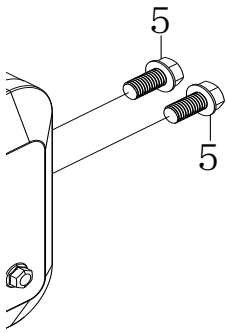

Engine : CP186F			
quantity	purchase quantity	Unit price	amount
1			0
1			0
2			0
2			0
2			0
			0

2

Engine : CP186F	
-----------------	--

quantity	purchase quantity	Unit price	amount
1			0
1			0
3			0
			0

]

	Engine : CP186F		
quantity	purchase quantity	Unit price	amount
1			0
1			0
			#REF!