

Spare Parts List for EP600
Explozie plese de schimb EP600

Major components		
PART NO.	DESCRIPTION	QTY
EP01	Handle (upper side)	1
EP02	Red switch, engine stop	1
EP03	Silver switch, engine stop (optional)	1
EP04	Triangular switch with red ball, engine stop (optional)	1
EP05	Throttle lever	1
EP06	Throttle cable	1
EP07	Handle (lower side)	1
EP08	Connect screw, handle	1
EP09	Clamping screw	1
EP10	Handle wheel A	1
EP11	Fixing seat for plane bearing	1
EP12	Adjusting screw stem	1
EP13	Screw stem	
EP14	Installing Gasket	1
EP15	Shaft, knock pin	1
EP16	Fixed plate, knock pin	each 1
EP17	Blade fixer	4
EP18	Adjusting device	4
EP19	Blade	1
EP20	Socket head bolt M8	1
EP21	Adjusting screw	1
EP22	Cross	1
EP23	Knock pin	1
EP24	Flat Key 6*6*25	1
EP25	Spindle	1
EP26	Bigger plate	1
EP27	Bearing 6808z	1
EP28	Plane bearing 644808 NK45/20	1
EP29	Circlip ϕ 18	1
EP30	Plane bearing ASK3552-LS	1
EP31	Small plate	1
EP32	Reduction box	1
EP33	Engine mounting plate	1
EP34	Engine	1
EP35	Flat key6*6*20	1
EP36	Clutch	1
EP37	Belt A25	1
EP38	Pulley	1
EP39	Flat key6*6*30	1
EP40	Protective cover (Aluminum)	1
EP41	Fixing ring for blades	1
EP42	Belt Cover	1
EP43	Rubber ring ϕ 600, pan	1
EP44	Plane bearing51110	1
EP45	Wire guidance	1
EP46	Spindle Washer	1
EP47	Screw	1
EP48	Lifting plate	1
	Support for belt cover	1
	Iron pan (Optional)	1
	Grip	2

